



3.0 Touch Screen MP4 Player


Please take your time to read the manual and it helps you to understand this product better.

Pre caution before using:

- Please keep the touch screen clean and avoid grease and scratch.
- Please avoid hot and humidity environment, such as hot temperature, water or moisture when using the MP4 player.
- Please do not drop the MP4 player to any hard surfaces, it will damage the player and any physical damages are not covered by our warranty.
- Please charge the MP4 regularly if you do not use it for a while, it will help to maintain the battery's lifespan.
- This Product specification, colors or packaging are subject to change without notice. Manual is for instruction purpose only, the operation interface and games may be changed to reflect the latest product update or sales region of country. All rights reserved by local distributor.
- All trademarks are registered to their respective trademark holders.
- Users should be aware of, understand and bear their own copyright issues and legal offences in accordance with copying, downloading the digital contents from internet or third parties.

Product specification:

- 3.0 Inch, 400x240 pixel true colour touch screen LCD.
- Audio format supports MP3, WMA, and WAV*.
- Supports mp3 lyric playing back.
- Video format support RM.RMVB, ASF, AVI and MP4 multiple video format (video resolution not larger than 640x480)*.
- Picture supports, JPG, BMP, GIF and PNG formats.
- Supports picture viewing, rotate and slide show.
- Support FM radio stations and FM recording.
- Support micro phone recording.
- Support 7 audio EQ settings.
- Support text viewer, book mark function and auto view.
- Support game function.
- Support system setting includes, power management, LCD.
- Brightness and wall paper and etc.
- USB 2.0 high speed interface.
- Compatible with Windows 2000/XP/VISTA.
- ***Some WMA or WAV files are protected by digital content management technology, and you may not be able to download them and play back on this MP4 player. This MP4 player supports most of popular video formats, however there are lots of video codec changes frequently on the internet, and we can not guarantee all type of movies' formats that you have on your computer are supported by this MP4 player, especially some video with HD format and higher resolution above 640x480.**

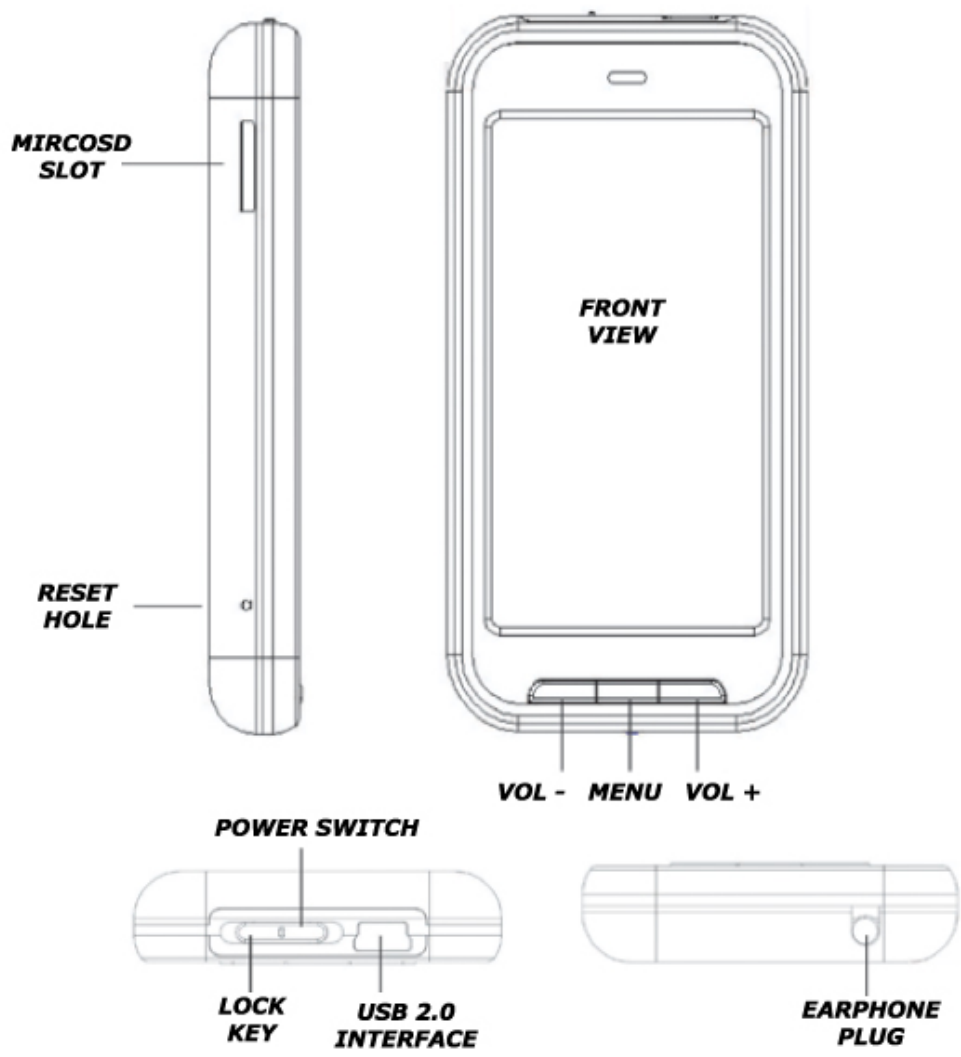

Product Operation Key Mapping

MP4 Player Basic Operation

Please peel off the LCD screen protector film before using the MP4 player in order to get a better responsive touch experiences.

Power on /off the MP4 player:

Push the power switch to the right side and hold on for 2-3 second to power on the MP4 player. To power off, just repeat the above procedures.

Lock the MP4 player:

Push the power switch to the left side to lock and push back to unlock the MP4 player. Lock function does not activate during video playing and picture viewing.

Adjust volume of the MP4 player:

Press the “VOL –“or “VOL +” to adjust volume or use touch screen’s volume control keys to adjust the volume.

Charging the MP4 player:

1. The MP4 player's battery is not fully charged at the factory. We recommend that you charge your MP4 player in full in order to maintain your battery's lifespan in the future.


2. The MP4 player can be charged through computer USB port or the AC/DC adaptor. However, we recommend you to use the AC/DC adaptor to charge your MP4 player. The AC/DC adaptor charges the MP4 player much faster than the USB port.

When you plug the MP4 player to the wall charger, the LCD screen will has a battery icon to indicate the charging process (as below)




Touch screen calibrate:

For the first time to use this MP4 player, please calibrate your TOUCH SCREEN to make your touch experience better. Please switch on your MP4 player, touch the Settings Icon, enter the settings mode, then choose " system settings" and enter. Choose the "Touch Calibration" Function. Please touch the center of the red cursor, and follow the movement of the red cursors to Adjust your MP4's TOUCH SCREEN till it finishes and pop out the calibration status, it could take up to 10-20 times repeat jobs, please be patient. You may need to calibrate the screen in couple of months' time if you feel the screen is not so responsive.

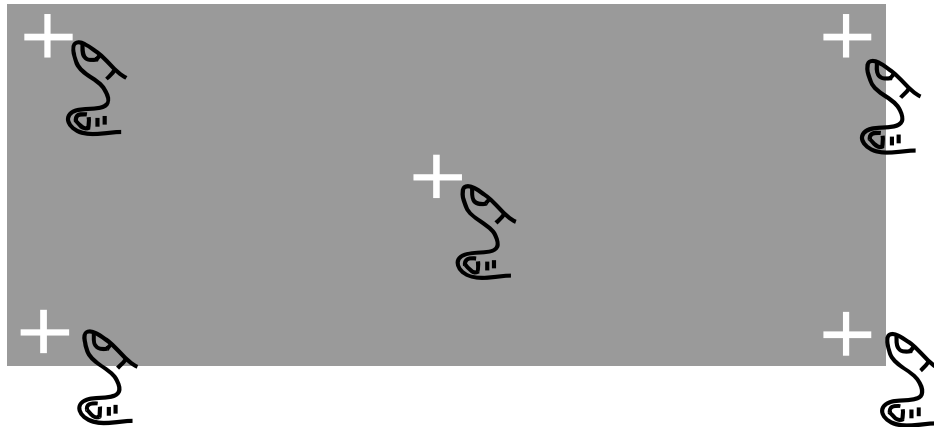


Connect the MP4 player to the computer:

Plug the MP4 player to your computer's USB port through the USB cable. The computer will detect the MP4 player and indicates 2 removable disks in "MY COMPUTER" explorer. The 1st removable disk states the internal memory for you to download music or videos, the 2nd removable disk states the mircoSD slot and it is not accessible if microSD card does not insert into it.

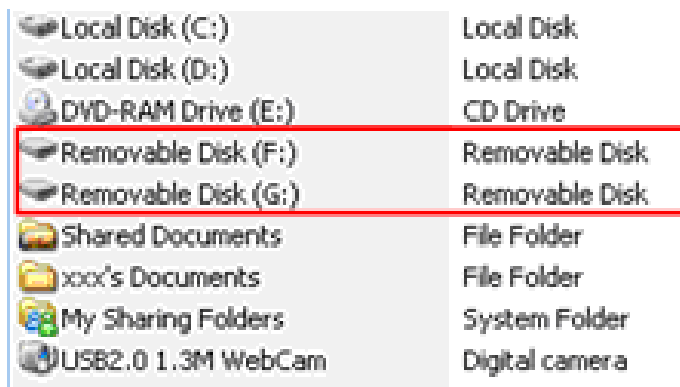

When you plug the MP4 player to the computer's USB port, the LCD screen will display a "USB connection" icon to indicate the USB connection process (as below)

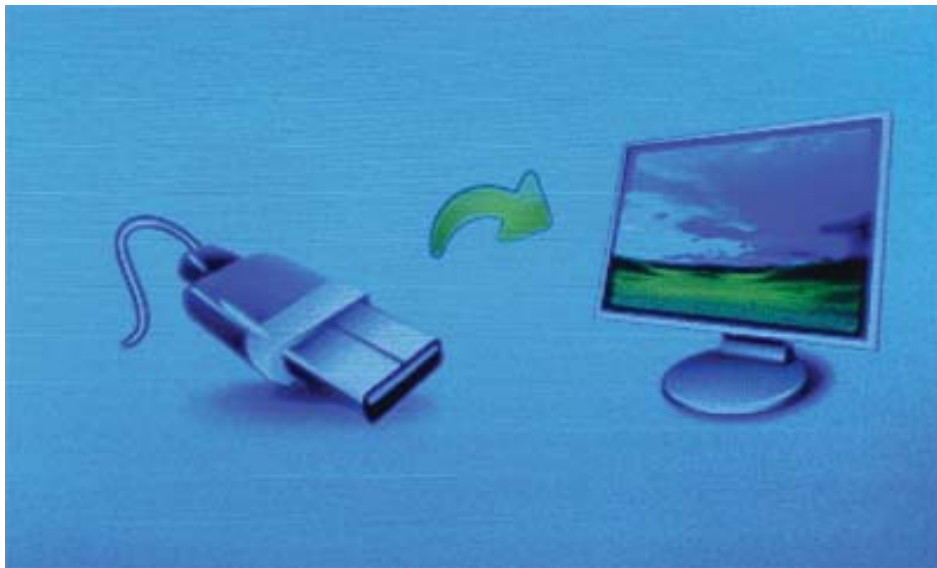

How to use MICROSD expansion slot:


1. The microSD SLOT supports 128MB to 4GB microSDHC card expansion. So you can get more rooms for your music, or videos. Please always turn off the MP4 player before plugging or unplugging the microSD card into the MP4 player.
2. To insert microSD card, please make sure that the golden finger of the microSD is face up, then gently insert it and do not push it very hard.
3. To remove the microSD card, use your finger nail to push the microSD card a little bit further deep and the card reader will eject the microSD card out and then you can remove it from the computer.

Once you insert the microSD into the MP4 player , switch on , and go to “ explorer” , you will find there are 2 folders available , 1st is the “ flash memory” , and 2nd is the “SD card” .




How to copy and download the files into the MP4 player:

Plug the MP4 player to your computer USB port through the USB cable, your computer will detect 2 removable disks as below (*please note the disk volume letter may vary in your own computer disk system)

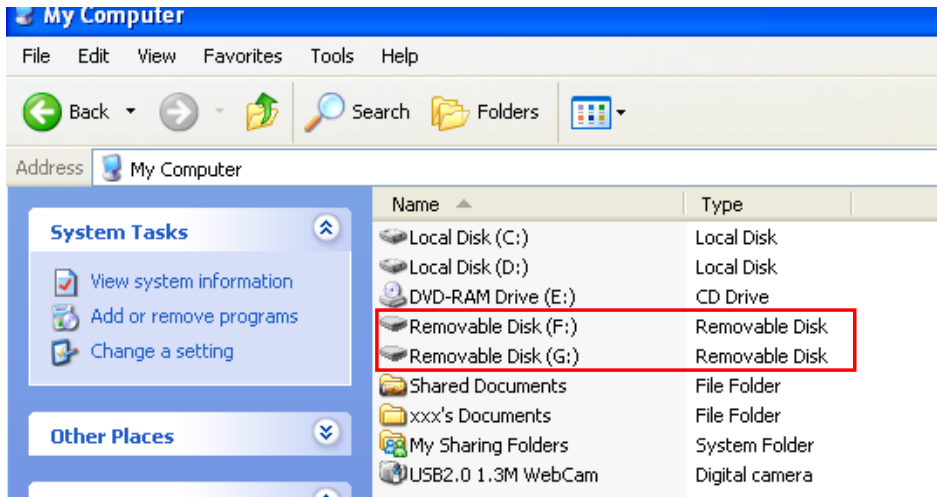

 1. Initially, Click the 1st removable disk and enter into the removable disk, as below:

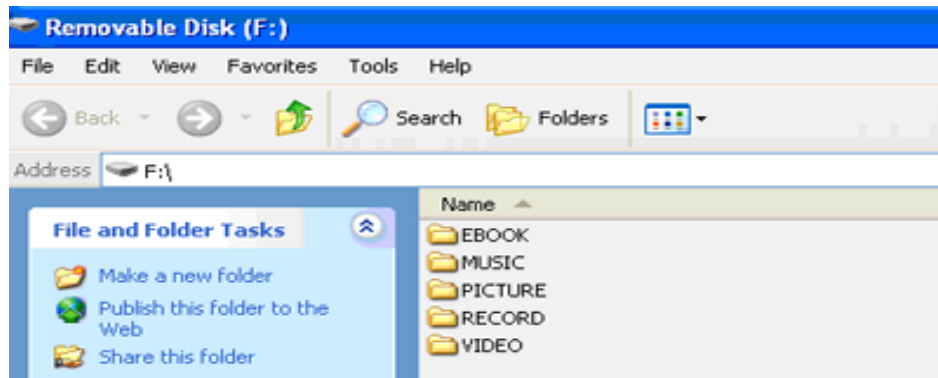

2. Then please copy your music files or video files into the above file folders, please note that if you do not copy files into those file folders, you are not able to directly access them through the touching of the MUSIC, VIDEO, PHOTO icons via main menu, however you can still access and view them through the “Explorer” icon.

MUSIC folder: You can store the MP3 , WMA and WAV music files

VIDEO folder: You can store RM, RMVB, AVI, ASF, MP4 video files

PICTURE folder: you can store the pictures into it.

EBOOK folder: you can store and access the text files.

RECORD folder: it stores all recording files.

3. To download files into the MP4 player, You can drag the source files into the proper folders , or you can select the file and right click the file , select “ COPY” function on the menu , then go to the 1st removable disk , click the proper folder and enter it , then right click , select “ PASTE” function on the menu. So you are able to download the file into the proper folder.

To reset the MP4 Player:


You can reset your MP4 player if the system is crashed or frozen during unknown reasons.

Safely remove the MP4 player:

Please always remember to safe remove hardware function to remove the MP4 player from your computer to avoid the damage or corruption of the data files. After safely remove the MP4 player, it will switch to USB charging battery status and start to charge your MP4 player.




MAIN MENU INTERFACE

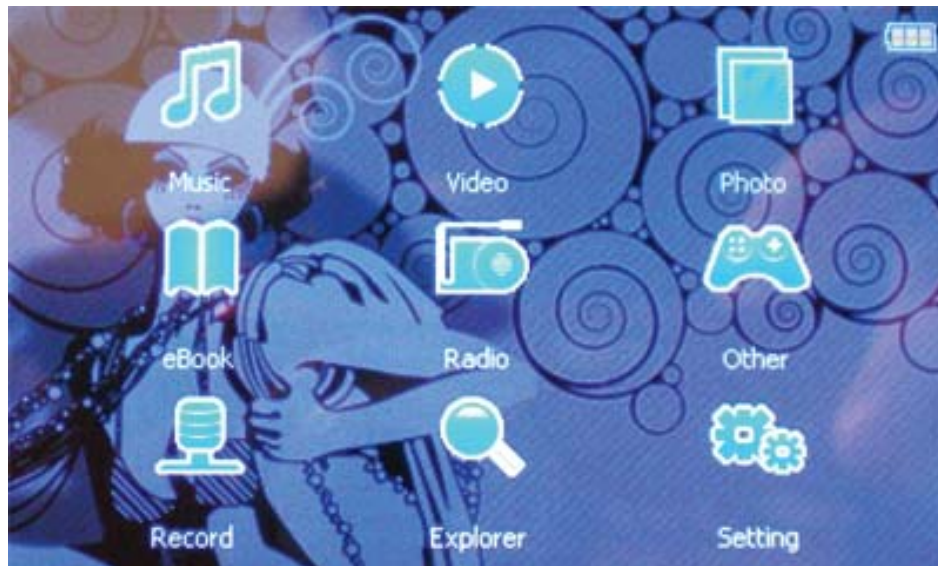





 
1. Music- Store and access your music files
2. Video- Store and access your movie files
3. Photo- Store and access your photo files
4. eBook- Store and access your text files
5. Radio- Access to the FM stations
6. Other- Stop watch and Game functions
7. Record- Record and save the audio files
8. Explorer- Search and view the files in the MP4 player
9. Setting- System settings to customise your own MP4 player

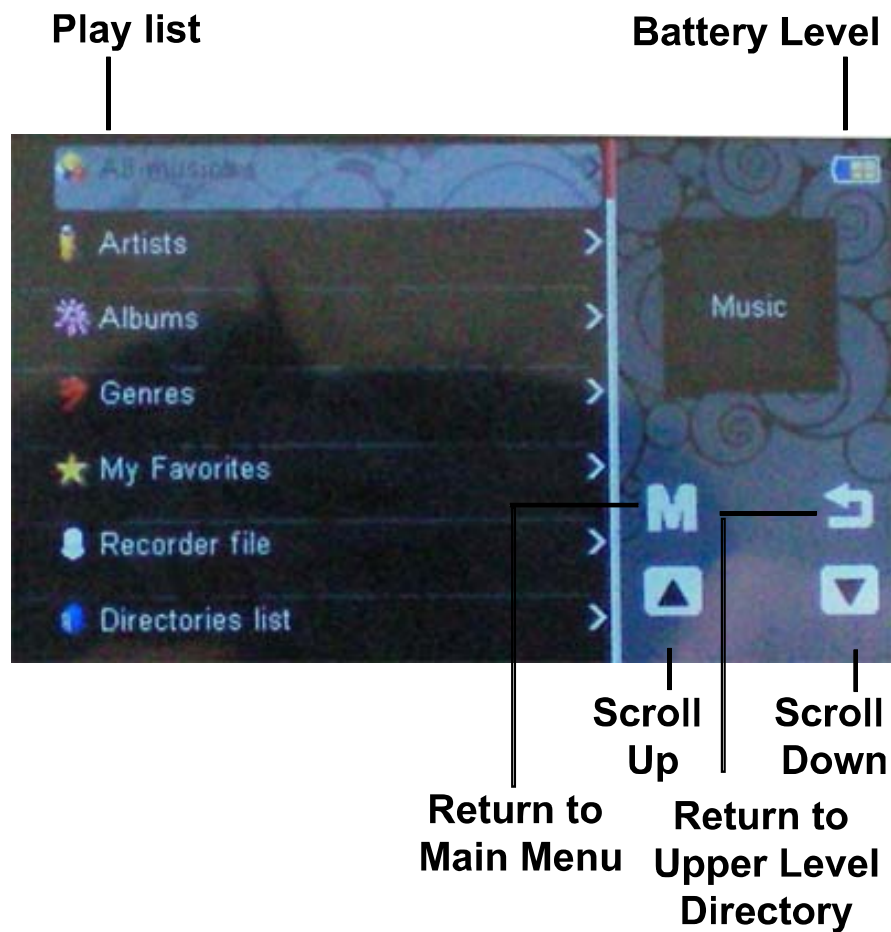MUSIC PLAY BACK FUNCTION

Touch the “Music” icon to enter the playing music mode.



1.  - indicate the battery power level
2.  - return to the main menu key
3.  - return to the upper level directory
4.  - scroll up the menu
5.  - scroll down the menu

Play list function:

 
The play list has the function to sort out the MP3 songs according the music album titles, artist names, genres in alphabet order.

- a. Now playing- indicate the current playing song
- b. All music- display all the available mp3 songs
- c. Artists- sort and display mp3 songs followed by artist name order*
- d. Albums- sort and display mp3 songs followed by album name order *
- e. Genres- sort the mp3 songs by music types*.

- f. My favourite –display my favourite songs.
- g. Recorder file- display recorded voice files.
- h. Directories list- display all the file folders contained in this MP4 player
- i. **Update media library**-After downloading mp3 songs or movies, the mp4 player usually will auto update the media library, also you can manually press this option to update the media library.

Please note that artists, albums and genres functions may not work if your mp3 songs do not contain those properties. Please see the examples as below:



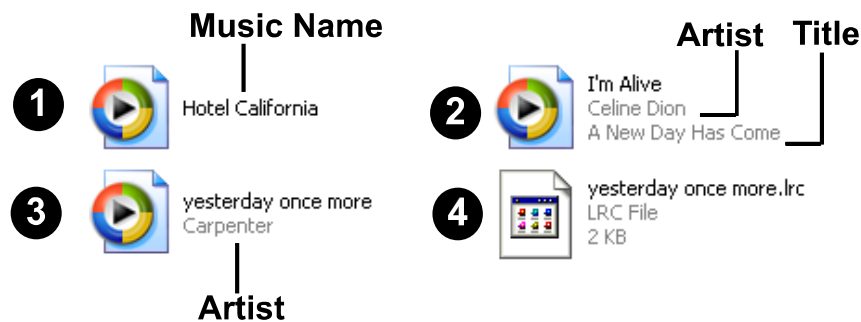


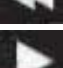 



- a. 1st song only contains music name.
- b. 2nd song contains music name, artist's name, and album name and genre type.
- c. 3rd song contains music name and artist only.
- d. Only music with Lyric file that can display lyric during playing.



2. Play music:

Press "VOL-" or "VOL +" key to increase or decrease the video volume.









1.  -Music play option, press to enter
 - a. Repeat mode (Once/Repeat/All/Repeat all/ Intro)
 - b. Play mode (In order/ Shuffle modes)
 - c. MSEQ-Microsoft EQ(3D/Bass/LEQ)
 - d. EQ Select (Normal/MSEQ/Rock/Pop/Classic/Bass/Jazz/User EQ)
2.  -Return to the main menu
3.  -Return to the upper level directory
4.  -Hide the player status bar
5.  -Rewind to the previous songs
6.  -Fast rewind the songs
7.  -Play music / Pause music
8.  -Fast forward the song
9.  -Forward to the next song

VIDEO PLAY BACK FUNCTION


Touch the “Video” icon to enter the video playing back function. Select video from VIDEO folder and click to play.

Touch the bottom of the screen to hide or display the video player status bar. Press “VOL-“or “VOL +” key to increase or decrease the video volume.



1.  -Rewind to the previous video
2.  -Fast rewind the video
3.  -Play video / Pause video
4.  -Fast forward the video
5.  -Forward to the next video
6.  -Return to the upper level directory


Continue to play the last session:

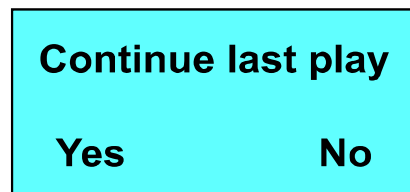


The MP4 player has the ability to store the last play session and can replay from the last play session. So if you exit the video and restart the movie, it will pop up a window to remind you whether you want to continue last play session or not. You can choose “Yes” or “No” as you like.

Time shift function:

When the movie starts, touch the centre of the LCD screen, it will pop up a time shift window to allow user to shift the time in the movie as below.

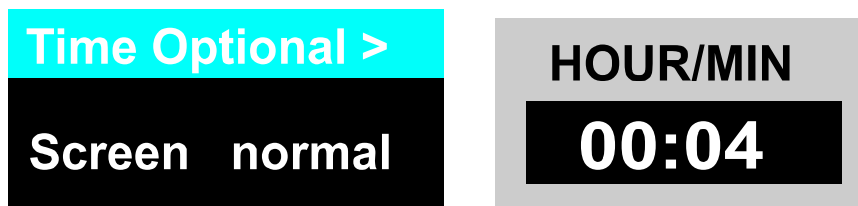

Touch the “ Time Optional” , it pops up the “ HOUR/MIN” window, use the “VOL-“ , “VOL +” key to increase or decrease the time , to shift the set up from Hour to Minutes, use “ M” key. Once you set up the desired time session, press the  key on the touch screen, then the movie will jump to that session to play.

Screen size mode:

When the movie starts, Touch the centre of the LCD screen, it will pop up a screen size mode window, touch “Screen”, it will change between “Normal size” and “Full screen” size.

Time Optional >

Screen Full

PHOTO VIEW FUNCTION


Touch the “Photo” function to enter the photo view function. You can rotate or zoom in/out the pictures








1.  -Photo play option, press to enter
 - a. Rotate right
 - b. Rotate left
 - c. Zoom in
 - d. Zoom out
 - f. Browse (Turn off/2 sec. / 5 sec./8 sec.)
2.  -Return to the main menu
3.  -Return to the upper level directory
4.  -Hide the photo view status bar
5.  -Go back to the previous photos
6.  -Forward to the next photos

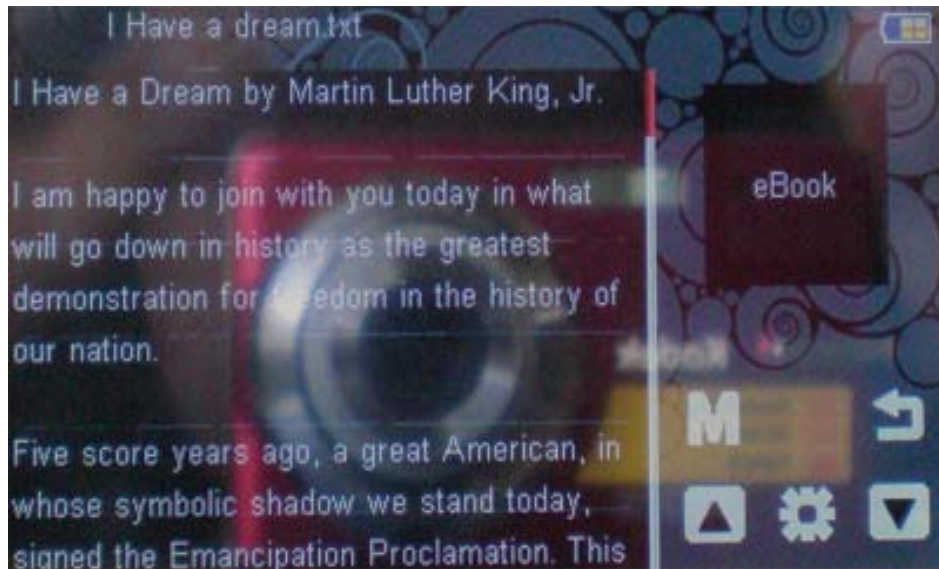EBOOK READER FUNCTION

Touch the "eBook" icon to enter the text reader mode, the MP4 player can read txt file.



1.  -Return to the main menu
2.  -Return to the upper level directory
3.  -Scroll up the text file
4.  -Text reader option, press to enter
 - a. Page jump- jump to the desired page as you like, press "VOL-" or "VOL+" to page up or page down , then press the "M" key to exit
 - b. Save mark- book mark and save your reading
 - c. Load mark- load the book marked articles
 - d. Delete mark- delete the book mark
 - f. Set font- set text file font
 - g. Set colour- set the font colour
 - h. Browser mode-Auto mode and manual mode
5.  -Scroll down the text file


FM RADIO FUNCTION







Touch the “Radio” icon to enter the FM radio mode.*Australian FM station frequency band is as same as CHINA, so please select CHINA area when you scan the FM radios.

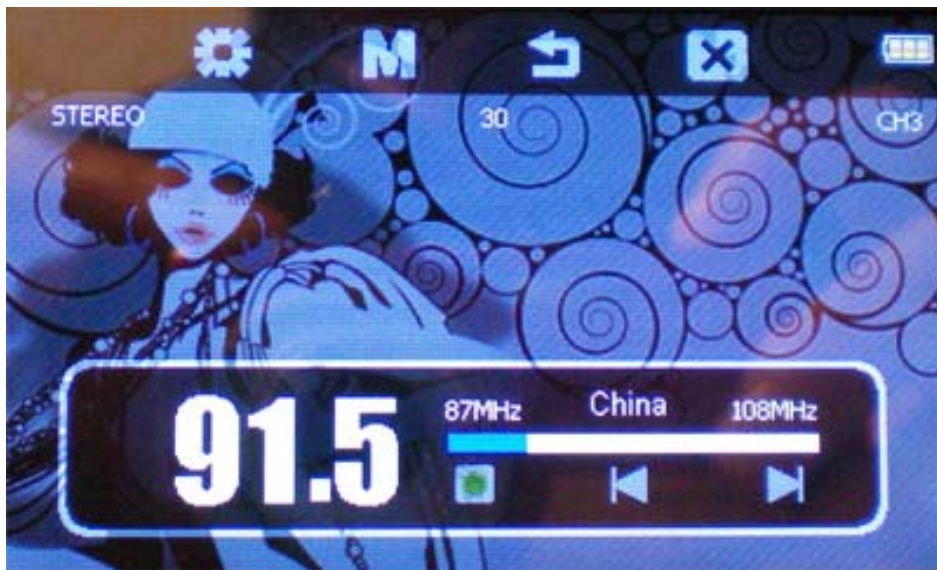Please note that you must plug your earphone into the MP4 player because the earphone works as the external antenna for good reception.

Please note that the MP4 player’s external speaker can only play music and video sound, not for FM radios.



Some users in the rural area may feel the weak signal transmission , thus the reception is poor, this FM radio function is not guaranteed to perform to all the users.




1.  -FM option, press to enter
 - a. Search by hand-manually scan the FM channels
 - b. Auto search- automatically scan and save the FM stations
 - c. Preset mode- save current playing channel for the next use
 - d. Save channel- saved scanned FM channels into memory
 - f. Delete channel- delete saved FM channels
 - g. Stereo switch-ON,OFF
 - h. Receive area- CHINA, USA, JAPAN, EUROPE, CAMPUS
2.  -Return to the main menu
3.  -Return to the upper level directory
4.  -Hide the radio player status bar
5.  -Record current FM radio channel
6.  -Scan /Go back to the previous FM channel

7.  Scan/Jump to the next FM channel


How to record the FM radio channel:

Press the "" to enter the FM channel record, the record bar displays the current recording time and the left available time. Press the "" icon, then to save the record audio file (FMRC00X.WAV) into the "RECORD" file folder.

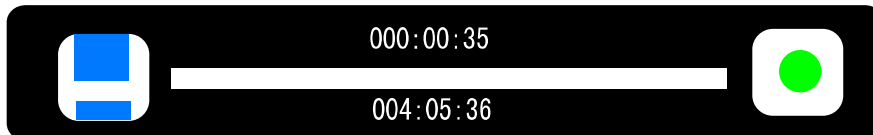

OTHER FUNCTION

Touch the "OTHER" function to enter the fun games.*The games include stop watch and line link. (Games may be subject to change without notice)

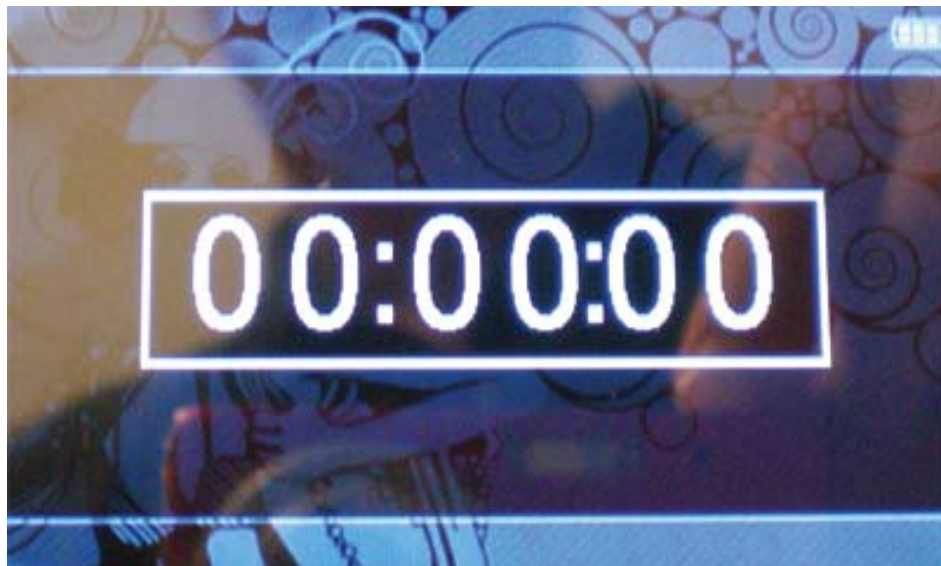


Stop watch:

Press the "M" key on the MP4 player to start the stop watch, press the "M" key again to stop it. Press "VOL-" or "VOL+" to increase or decrease time, then long press and release the "M" key to exit.


Line link:

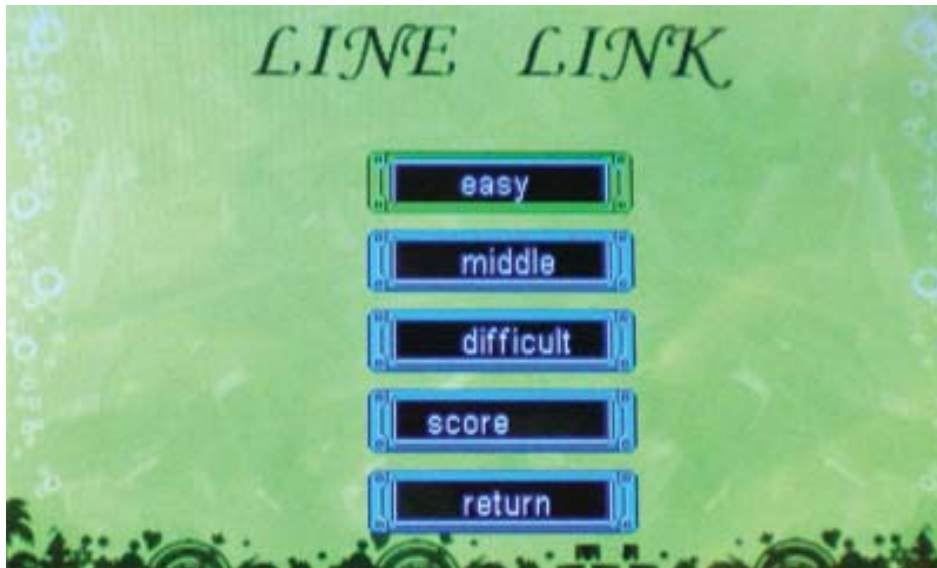

Press line link to enter the game mode.





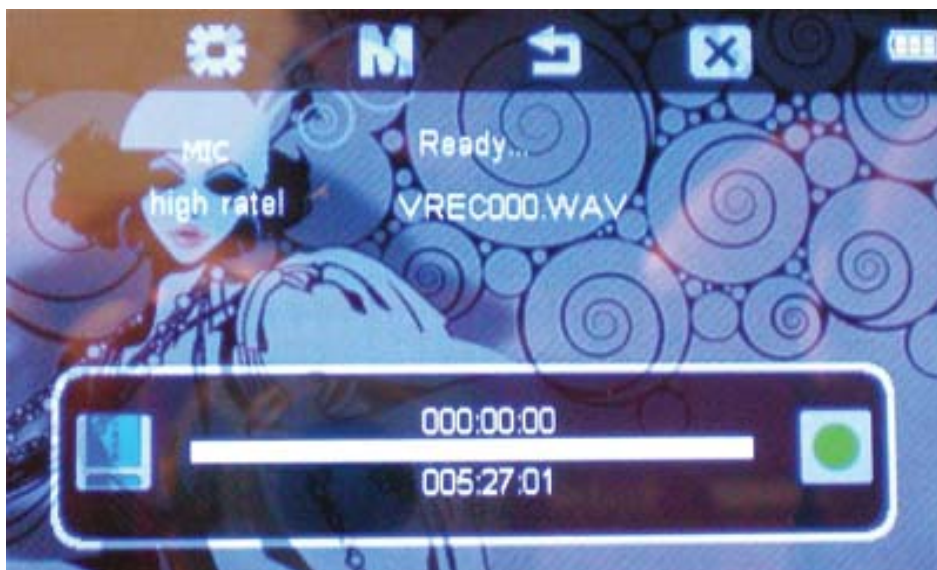

RECORDER FUNCTION

Touch the "Recorder" icon to enter the voice recorder function. You can record voice file (VREC00X.WAV) and save it in the "RECORDER" folder.



1.  -Record option, press to enter
 - a. Quality - Select record quality in HIGH OR LOW.
 - b. Volume - Set up volume from 1 to 5 levels.
2.  -Return to the main menu

3.  -Return to the upper level directory
4.  -Hide the voice recorder status bar
5.  -Save recorded files
6.  -Record voice files

EXPLORER FUNCTION

Touch the “Explorer” icon to enter the file navigation function. It displays all the files contained in this MP4 player.



SETTING FUNCTION

Touch the “Setting” icon to enter the MP4 player configuration settings. It allows you to customise your own MP4 player.



1. **Display setting:**
 - a. Light Time-switch from 5-30 seconds, or stay always on.
 - b. Brightness-adjust MP4 player brightness from 1 to 5 levels.
 - c. Light Mode- adjust LCD screen between ALL dark mode and Penumbra mode.
 - d. Display status bar- Choose to hide or display status bar.
2. **System Setting:**
 - a. Upgrade-require firmware to upgrade, not recommend to normal user.
 - b. Restorable-restore the MP4 to factory default mode, your MP4 player data may lose.
 - c. Auto shut –auto shut the MP4 player from 3 minutes to 20 minutes or never shut down.
3. **Desktop:**
 - a. Choose 8 desktop themes as the MP4 player's background wall paper.
4. **Language:**
 - a. Support multiple languages.
5. **System information:**
 - a. Display the MP4 player system information, such as memory capacity, software version, etc.
6. **Touch calibration:**
 - a. Calibrate the touch screen sensitivity. Touch the Red Cross cursor on the screen, and follow the movement of the cursors and repeat till finish.

FQA of the MP4 player

1. Can not turn on the MP4 player

- a. Battery no power
- b. Main power switch does not turn on
- c. Power adaptor faulty , can not recharge the battery
- d. USB cable faulty, thus the player can not be charged

2. How can I get the CD album songs into the MP4 player

- a. If you have mp3 format songs ,you can direct copy them into the MP4 player to play
- b. If you only have the CD album, you need software to convert the songs into MP3 format, there are lots of free softwares on the internet that help you to do it, please find it. Please be aware some CD albums have the protection to prevent copying, you may still not to copy them and convert them into MP3 format.

3. Earplugs are no sound or noisy

- a. Check the volume settings , make sure the volume not in mute position
- b. Use another pair of earplug to try
- c. Make sure the music file compression rate is high , low quality mp3 files may cause noisy and distortion
- d. Some WMA files downloaded from Bigpond, I Tune, and other digital music sites are digital content protected and only licensed to play in the 1st downloaded computer. Hence they may not be able to play on the normal MP4 players.

4. How to copy files into the MP4 player (for windows OS)

- a. Select the files that you want to copy to the MP4 player and then go the MP4 removable disk , open it
- b. You can drag them into the disk
- c. You can right click selected files , select “ COPY” function from the pop up menu , and then do the “ PASTE” into the MP4 player disk
- d. You can use short cut key on the keyboard to perform above process, Cut file – “ **Ctrl +X**” , Copy file – “ **Ctrl +C**” , Paste file-“ **Ctrl +V**”

5. FM no signal or poor reception

- a. Make sure the earphone plugged with your MP4 for FM radio
- b. The earphone wire works as the external antenna for FM radio, adjust wire position or stretch the wire for a better reception
- c. Bring your MP4 to the outdoor open area to scan the station again
- d. For Australian user, set the FM receive area to “CHINA”

6. Can not download files into the MP4 player or can not detect the MP4 player

- a. Check the USB cable, to see if the USB data cable is faulty or not
- b. Connect the MP4 player , check the memory whether it is full or not

- c. Windows 98 may require a new USB2.0 DRIVER to detect the MP4 player as the removable disk

7. Can not play the movie files

- a. The MP4 player has the limitation of video ability and is able to direct play most of popular movies formats (such as AVI, RM, RMVB, DAT) that can be downloaded from internet with resolution not above 640x 480. However, the technology always changes, and some latest MP4 formats or resolutions may not support on this MP4 player yet. Please understand it.

8. Can I upgrade firmware

- a. The MP4 uses latest firmware and no any firmware released recently. Also the upgrade firmware may have the risk to lose the proper functions of the MP4 player if it does not perform by skilled person and it is not covered by our warranty policy.